

Programming the Remote Control

Introduction

In addition to operating your digital home communications terminal (DHCT), you can program the E2050 (ER1) Remote Control (remote) to operate your TV and VCR. To program the remote, use the following procedures.

Using Mode Keys

Press the appropriate mode key to switch the remote control operation to the configured device:



Programming for TV Operation

The remote for the DHCT can control the power, volume up and down, and mute functions on your TV. Use the following steps to program the remote for your TV.

1. If your TV is plugged into your DHCT, then turn on the power to your DHCT.
2. Turn on the power to your TV.
3. Locate your TV brand and setup code in the **TV Setup Codes** list in this guide. If your TV brand is not listed, see **Searching the Code Library**.
4. Point the remote away from your DHCT, TV, and VCR.
5. On your remote, press and hold **TV** and **SELECT** at the same time until the light on the remote blinks twice.
6. Using the keypad on your remote, enter the 3-digit setup code for your TV brand. The light on the remote blinks twice.
7. Confirm the setup code works by pointing the remote toward your TV and test the **POWER**, **VOLUME**, and **MUTE** functions.

8. Did the TV operate correctly?

- If **yes**, write down the TV code that worked in the **Record of Codes** section in this guide. You may need it again if the device code is accidentally erased.
- If **no**, repeat this procedure from step 2 using a different setup code.

Note: If you programmed the remote to adjust the volume on your DHCT rather than the volume on the TV, test only the **POWER** function.

Programming for VCR Operation

Your remote can control the VCR power, tape play, record, fast forward, rewind, stop, and TV/VCR functions for many VCR models. Use the following steps to manually set up your VCR to record programs.

1. Turn on the power to your VCR and insert a videotape.
2. Move the VCR/VOD slide switch on the remote to the VCR position.
3. Locate your VCR brand and setup code in the **VCR Setup Codes** list in this guide. If your VCR brand is not listed, see **Searching the Code Library**.
4. Point the remote away from your DHCT, TV, and VCR.
5. On your remote, press and hold **VCR** and **SELECT** at the same time, until the light on the remote blinks twice.
6. Using the keypad on the remote, enter the 3-digit setup code for your VCR brand. The light on the remote blinks twice.
7. Confirm the setup code works by pointing the remote toward your VCR and test the **POWER**, **PLAY**, and **STOP** functions.

8. Did the VCR operate correctly?

- If **yes**, write down the VCR code that worked in the **Record of Codes** section in this guide. You may need it again if the device code is accidentally erased.
- If **no**, repeat this procedure from step 2 using a different setup code.

Searching the Code Library

If none of the codes listed for your device work, you can search the code library for a valid code. The remote automatically selects the proper code for your TV or VCR.

1. Turn on the device in question before you search for a code.
 2. Point the remote away from the device you are programming.
 3. To search for the code, press and hold **SELECT** and the appropriate mode key (**CBL**, **TV**, **VCR**) until the light on the remote blinks twice. For example, to search for a TV code, hold down **SELECT** and **TV** until the light blinks twice.
 4. Press **9 9 1**. The light blinks twice.
 5. Point the remote toward the device, and press the appropriate mode key.
 6. Did the device turn off?
 - If **yes**, go step 7.
 - If **no**, repeat step 5.
- Note:** The light on the remote blinks twice when you reach the end of the code library. This procedure searches the following number of codes in each library:
- VCR: 32 codes
 - TV: 32 codes
 - CBL: 20 codes
7. Press **SELECT** to confirm a valid code. The light on the remote blinks twice.
 8. Point the remote toward the device you programmed and press **POWER** to confirm that the device powers on.

Important: If you are searching for a CBL code, and the remote does not find a suitable CBL code, go to the **Programming for Cable Operation** procedure and use code **260**.

Unlocking the CBL Mode Key

Your cable set-top device code is "locked" to keep you from changing the cable code unintentionally. If you need to program the remote to operate a different cable set-top device, use the following steps to unlock the CBL key.

1. Press and hold **SELECT** and **CBL** until the light blinks twice.
2. Press **9 9 6**.
3. Press **CH-** (channel down key) to unlock the set-top device code.

Result: You can now assign your CBL key to a different cable device; see the **Programming for Cable Operation** procedure.

Programming for Cable Operation

Use the following steps if you need to program the remote to operate a different cable device.

1. Locate your cable brand in the **Cable Setup Codes** section in this guide.
2. Turn on your cable device.
3. Point the remote away from your DHCT, TV, and VCR.
4. Press and hold **SELECT** and **CBL** until the light blinks twice.
5. Enter the setup code for your cable device. The light on the remote should blink twice. If not, repeat this procedure using a different setup code; or go to **Searching the Code Library**.
6. Point the remote toward the cable device and test the code by pressing **CBL**.

Identifying Codes

Identifying Programmed Codes

You can find out which code you used to program your TV or VCR. You can determine the code by counting the number of times the light blinks during the following procedure.

1. Point the remote away from your DHCT, TV, and VCR.
2. Do one of the following:
 - To identify the TV code, press and hold **TV** and **SELECT** at the same time until the light on the remote blinks twice.
 - To identify the VCR code, press and hold **VCR** and **SELECT** at the same time until the light on the remote blinks twice.
3. Press **9 9 0**. The light on the remote blinks twice.
4. Press **1** and count the light blinks. The number of blinks indicates the first number in the code. For example, 4 blinks indicates the first number in the code is 4. If the light does not blink, the digit is 0 (zero).
5. Press **2** and count the light blinks. The number of blinks indicates the second number in the code.
6. Press **3** and count the light blinks. The number of blinks indicates the third number in the code.
7. Write down the code in the **Record of Codes** section in this guide.

Controlling Volume

Programming for Volume Control

You can program the remote to control the volume and mute functions through the DHCT, or through your TV. The default is through your TV.

1. Point the remote away from your DHCT, TV, and VCR.
2. Press and hold **CBL** and **SELECT** at the same time, until the light on the remote blinks twice.
3. Press **9 9 3**. The light on the remote blinks twice.
4. Press the **TV** key or the **CBL** key, depending on which device you want to control the volume. The light on the remote blinks twice to confirm a valid selection.
5. Point the remote toward the device on which you chose to control the volume, and adjust the volume to confirm operation.

Record of Codes

Record your setup codes in the following table.

TV	
VCR	
CBL	

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by Scientific-Atlanta could void the user's authority to operate this equipment.



Model ER1 Remote Control

User's Guide



United States: Scientific-Atlanta, Inc., 5030 Sugarloaf Parkway, Box 465447, Lawrenceville, GA 30042


Product and service availability subject to change without notice.

All rights reserved. Scientific-Atlanta, and the Scientific-Atlanta logo are registered trademarks of Scientific-Atlanta, Inc. VCR Commander is a trademark of Scientific-Atlanta, Inc. All other trademarks shown are trademarks of their respective owners.

© 2003 Scientific-Atlanta, Inc.
Printed in USA
Part Number 716360 Rev E

www.scientificatlanta.com
December 2003

ER1 Remote Control Quick Reference

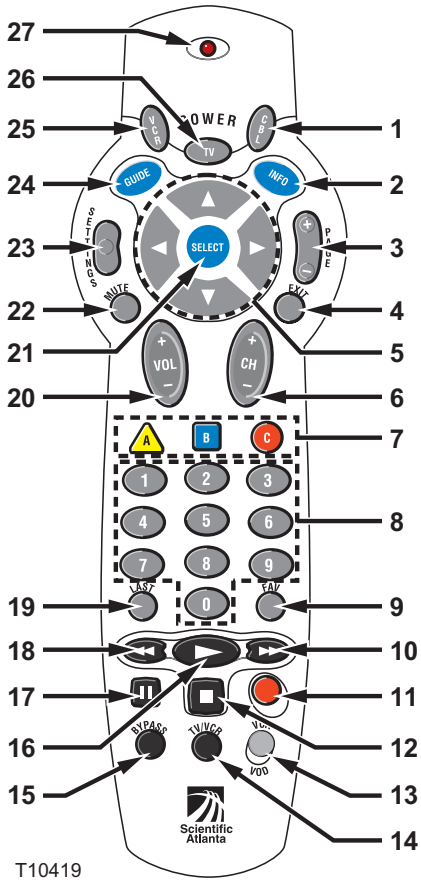

- Notes:**
- Program the remote control before you use your DHCT. See **Programming the Remote Control** for programming procedures.
 - The remote requires two AA batteries (alkaline recommended). A diagram in the battery compartment of the remote indicates proper placement of the batteries. When batteries are properly installed, the light on the remote blinks each time a key is pressed.
 - The ER1 Remote Control is not a toy. It should be kept out of the reach of children under the age of 6 years.

Device Control

- 1 DHCT on or off
- 25 VCR on or off
- 26 TV on or off
- 27 Light
- 13 Switches control of fast forward and rewind function keys between your VCR and video-on-demand (VOD) program
- 14 Controls your TV/VCR function on your VCR
- 15 Controls the optional BYPASS feature. (You can purchase an optional Bypass module. Refer to the **RF Bypass Module User's Guide**.)

Sound Control

- 20 Adjusts volume
- 22 Mutes sound

VCR/VOD Control

- 10 Fast forwards VCR/VOD
- 11 Records program
- 12 Stops VCR/VOD
- 18 Rewinds VCR/VOD
- 16 Plays VCR/VOD
- 17 Pauses VCR/VOD

Viewing and Browsing Control

- 3 Pages Up/Pages Down
- 4 Exits settings, menus, and guides
- 7 Selects options in menus and program guides
- 24 Displays program guide
- 23 Navigates through program guide or settings
- 5 Moves through menus or program guides
- 21 Selects and deselects screen item
- 2 Displays channel and program information
- 6 Selects channels, up or down
- 8 Enters channel numbers or personal identification number (PIN) for parental control
- 9 Views favorite channels
- 19 Returns to last channel viewed

Cable Setup Codes

You must enter all three digits to program the cable setup code.

Brand	Codes
ABC	017, 025, 028, 061
Everquest	029
Gemini	029
General Instruments	025, 290, 490
Goldstar	158
Hitachi	025
Jerrold	017, 025, 026, 028, 029, 038, 061, 112, 290, 490
Magnavox	046
Memorex	014
Motorola	025, 290, 490
Panasonic	014
Paragon	014
Pioneer	037, 158, 274, 547
Pulsar	014
Radio Shack	029
Rembrandt	025
Runco	014
Samsung	158
Scientific-Atlanta	491
Signal	029
Signature	025
Starcom	017, 029, 061, 112
Stargate	029
Starquest	029
Tocom	026
Toshiba	014
Tusa	029
United Cable	017
Zenith	014, 068, 539

TV Setup Codes

You must enter all three digits to program the TV setup code.

Admiral	107
Adventura	060
Aiko	106
Akai	044
Alaron	193
Ambassador	191
Anam	194
Anam National	069, 194
AOC	033, 044, 199
Audiovox	106, 194, 465
Baysonic	194
Belcor	033
Bell & Howell	030, 168
Bradford	194
Brocksonic	250, 477
Candle	044, 060, 066, 070
Carnivale	044
Carver	068
Celebrity	014
Cineral	106, 465
Citizen	044, 060, 070, 074, 106
Concerto	070
Contec	194
Craig	194
Crosley	068
Crown	194
Curtis Mathes	030, 044, 061, 065, 068, 070, 074, 107, 159, 168, 180, 465
CXC	194
Daewoo	106, 465
Denon	159
Dumont	031
Electroband	014
Emerson	168, 191, 192, 193, 194, 250, 296, 477
Envision	044
Fisher	168
Fujitsu	193
Funai	185, 193, 194
Futuretech	194
GE	035, 061, 065, 107, 149, 192, 296, 465
Gilbralter	031, 044
GoldStar	044, 070, 192
Gradiente	067, 070
Grunpy	193, 194
Hallmark	192
Harley Davidson	193
Harvard	194
Hitachi	070, 159
Infinity	068
Inteq	031
Janeil	060
JBL	068
JCB	014
JVC	067
KEC	194
Kenwood	044
Kloss	060
KTV	044, 194
LG	070
Logik	030
Luxman	070
LXI	061, 068, 168, 170, 192
Magnavox	044, 068, 193
Majestic	030
Marantz	044, 068
Matsushita	264
Megatron	159, 192
Memorex	030, 070, 164, 168, 192, 264
MGA	044, 164, 192
Midland	031, 061, 065, 149
Minutz	035
Mitsubishi	107, 164, 192
Motorola	107
MTC	044, 070, 074
Multitech	194
NAD	170, 180, 192
NEC	044, 070
Nikko	044, 106, 192
NTC	106
Onwa	194
Optimus	168, 180, 264
Optonica	107, 179
Orion	193, 250, 477
Panasonic	065, 264
Penney	035, 044, 061, 065, 070, 074, 149, 170, 192
Philco	044, 068, 159, 477
Philips	068
Pilot	044
Pioneer	180
Portland	106
Prism	065
Proscan	061
Proton	192
Pulsar	031
Quasar	065, 179, 264
Radio Shack	044, 061, 070, 168, 179, 192, 194
RCA	061, 065, 104, 107, 149
Realistic	044, 070, 168, 179, 192, 194
Runco	031, 044, 053
Sampo	044
Samsung	044, 070, 074, 192
Sansui	465
Sansui	477
Sanyo	168
Scotch	192
Scott	192, 193, 194, 250
Sears	061, 068, 070, 168, 170, 185, 192, 193
Semivox	194
Semp	170
Sharp	107, 179
Signature	030
Sony	014
Soundesign	192, 193, 194
Squareview	185
SSS	194
Starlite	194
Supre-Macy	060
Supreme	014
Sylvania	044, 068
Symphonic	185
Tandyl	107
Tatung	069
Technics	065, 264
Technol Ace	193
Techwood	065, 070
Teknika	030, 068, 070, 074, 106, 164, 193, 194
Telefunken	070
TMK	070, 191, 192
Toshiba	074, 168, 170
Vector Research	044
Victor	067
Vidikron	068
Vidtech	192
Viking	060
Wards	030, 035, 044, 068, 070, 179, 192, 193
Yamaha	044
Zenith	030, 031, 106

VCR Setup Codes

You must enter all three digits to program the VCR setup code.

Admiral	062
Adventura	014
Aiko	292
Aiwa	014, 051
Akai	055, 075, 120
American High	049
Asha	254
Audiovox	051
Beaumarck	254
Bell & Howell	118
Brocksonic	016, 135, 198, 225
CCE	086, 292
Calix	051
Canon	049
Carver	095
Cineral	292
Citizen	051, 292
Colt	086
Craig	051, 061, 086, 254
Curtis Mathes	049, 055, 074, 176
Cybernex	254
Daewoo	059, 292
Denon	056
Dynatech	014
Electrohome	051
Electrohome	051
Emerex	046
Emerson	014, 016, 051, 057, 075, 135, 198, 222, 225, 226, 292
Fisher	061, 068, 118
Fuji	047, 049
Funai	014
GE	049, 062, 074, 254
Garrard	014
GoldStar	051, 052
Gradiente	014
HI-Q	061
Harley Davidson	014
Harman/Kardon	052
Harwood	086
Headquarter	060
Hitachi	014, 055, 056, 119
JC Penney	049, 051, 052, 056, 068, 254
Jensen	055
JVC	055, 081
KEC	051, 292
Kenwood	052, 055, 081
KLH	086
Kodak	049, 051
LXI	051
Lloyd's	014, 222
Logik	086
Magnasonic	292
Magnavox	014, 049, 053, 095
Magnin	254
Marantz	049, 095
Marta	051
Matsushita	049, 176
MEI	049
Memorex	014, 049, 051, 053, 060, 061, 062, 118, 176, 254
MGA	057, 075, 254
MGN Technology	254
Minolta	056, 119
Mitsubishi	057, 062, 075, 081
Motorola	049, 062
MTC	014, 254
Multitech	014, 086
NEC	052, 055, 081, 118
Nikko	051
Noblex	254
Olympus	049
Optimus	051, 062, 118, 176
Orion	016, 198
Panasonic	049, 176
Pentax	056, 119
Philco	049
Phillips	049, 095
Pilot	051
Pioneer	081, 176
Proffrontronic	254
Proscan	074, 086
Protec	086
Pulsar	053
Quarter	060
Quartz	060
Quasar	049, 176
RCA	049, 056, 062, 074, 119, 120, 254
Radio Shack	014, 051
Radix	051
Randex	051
Realistic	014, 049, 051, 060, 061, 062, 118
Runco	053
Samsung	059, 254
Sanky	053, 062
Sansui	014, 055, 081
Sanyo	060, 061, 118, 254
Scott	057, 059, 135, 198, 225, 226, 255
Sears	014, 049, 051, 056, 060, 061, 068, 118, 119
Semp	059
Sharp	062
Shintom	086
Shogun	254
Singer	086
Sony	014, 046, 047, 048, 049
STS	056
Sylvania	014, 049, 057, 095
Symphonic	014
TMK	222, 254
Tatung	055
Teac	014, 055
Technics	049, 176
Teknika	014, 049, 051
Thomas	014
Toshiba	057, 059, 226
Totevision	051, 254
Unitech	254
Vector	059
Vector Research	052
Video Concepts	059, 075
Videosonic	254
Wards	014, 049, 056, 061, 062, 074, 086, 095, 226, 254
White Westinghouse	292
XR-1000	014, 049, 086
Yamaha	052
Zenith	014, 047, 053