

Southwest Stream Gen 2

Roku

User Guide



The information included in this document is correct at the time of release. © 2025 Southwest Broadband, all rights reserved.

Printed in the USA. SW STREAM is a registered trademark of Southwest Broadband.

All other trademarks are the property of their respective owners.


Table of Contents

Subscriber Name	Subscriber Password
Notes	
How to See the TV Guide with You	our Favorite Lists11
Changing Your Favorite Lists	10
How to See Your Favorite Lists .	9
Create Favorite Channel Lists	9
Settings	8
	8
Program Options While Watchin	g TV7
Restart TV that You Missed	6
Future Program Options in TV G	Guide 6
TV Guide	5
Getting Started with the Remote	Control Main Features5
Introduction to Your TV Features	s4
Main Menu	4
Installing the SW STREAM Gen	2 IV App 3


Installing the SW STREAM App

Make sure your Roku is fully setup and connected to your home internet (Wi-Fi or wired ethernet).

From the Roku Home screen, **search** for "**swstream**". Select the "**SW STREAM Gen 2**" version, as shown below. The **Open/Add app** will be highlighted, then press "**OK**" to complete.

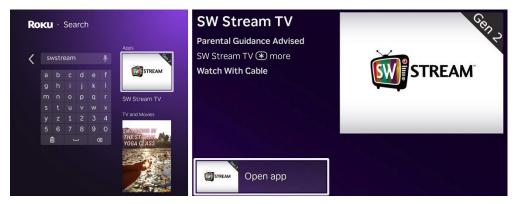

Log in: Enter your **Subscriber Name** and **Subscriber Password** on the login screen. Type in a **unique device name** that is familiar to you for the device being setup (example: TVbdrm, rokuLvrm. NOTE: You must use a unique device name for each Roku. Then select "Submit". If you see an error, please confirm that you entered your login credentials correctly.

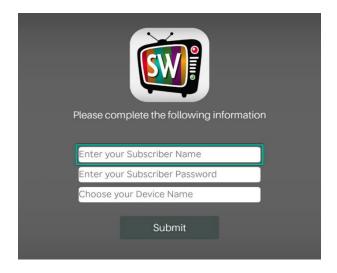

In a few moments, you will see a preview of the first channel in the lineup within the Main Menu as shown below.

Main Menu




Introduction to Your TV Features

Here are some of the main features available to you on SW STREAM.

- Record what you are watching live, record a program or series from the TV Guide that aired up to 24 hours ago, and schedule future recordings from the TV Guide
- From the Main Menu, you can see the weather in your area, view a list of programs on each channel available for restart, and go to Settings for creating favorite lists and parental controls.
- Go back up to 24 hours in your TV Guide to watch or record a program or add it to your favorite list.

Getting Started with the Remote-Control Main Features

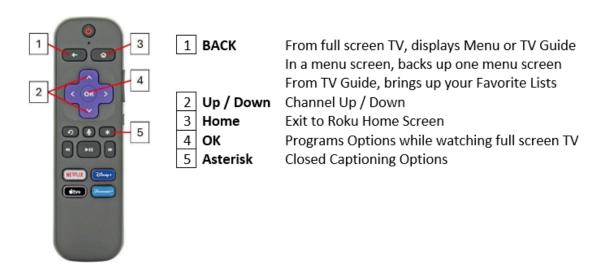


TV Guide




Future Program - Options in TV Guide

Here are the options for programs airing in the future.

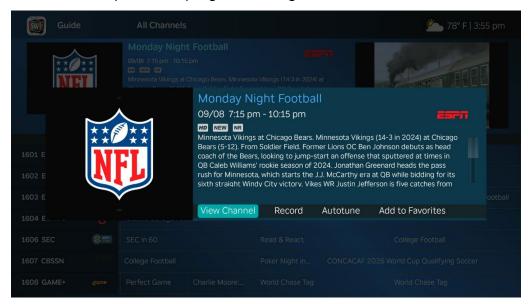


Restart TV that You Missed

You can scroll back up to 24 hours in the TV Guide to watch or record a program you may have missed. The main Menu also has a "**Restart TV**" list of all the programs available to restart in the past 24 hours listed by channel number.

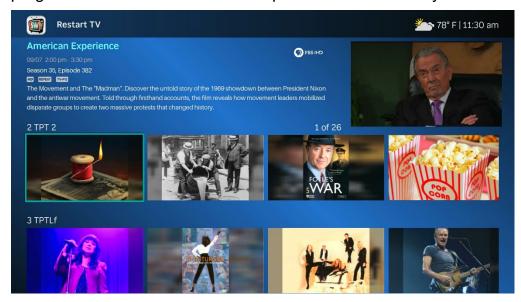

Program Options - While Watching TV

While watching a program (live or replay), press the "OK" button to display all your options.

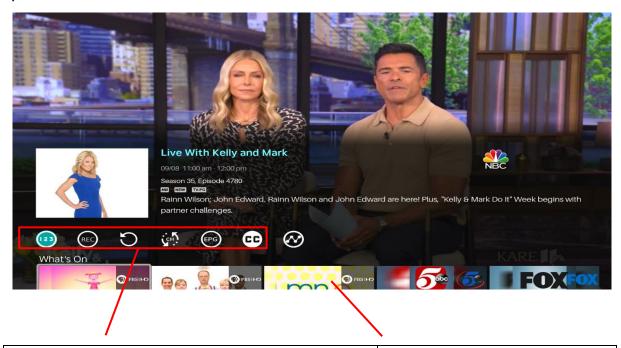

• 123 – displays a numeric keypad to enter the CH #



- REC record options
- Start this program over from the beginning
- Tune last channel
- EPG TV Guide
- CC Closed Captioning


Remote arrow down to display more content:

- What's On
- Trending programs
- Last 10 Channels Tuned
- Your Recordings

How to Record


- 1. You can record the program you are currently watching. Choose to record just one episode or the entire series.
- 2. From the TV Guide, you can schedule to record a future program or go back in the TV Guide up to 24 hours to watch or record a program.

NOTE: DVR recording capacity is 30 hours and recordings auto-delete in 7 days.

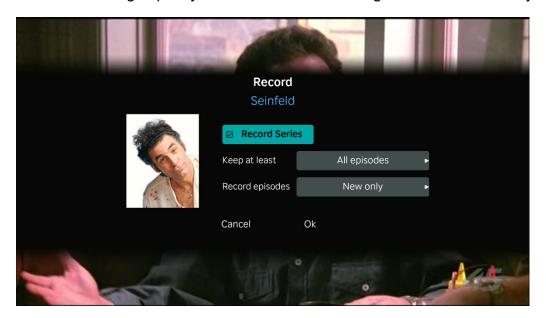


Settings

From the Main Menu, select Settings to display these options.

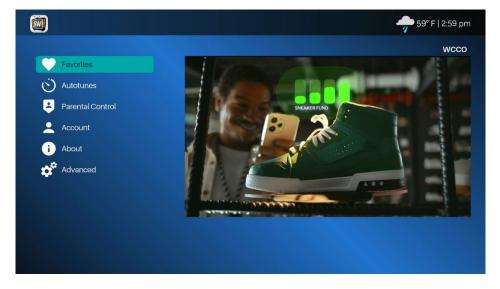


Create Favorite Channel Lists

Create as many favorite channel lists as you want.

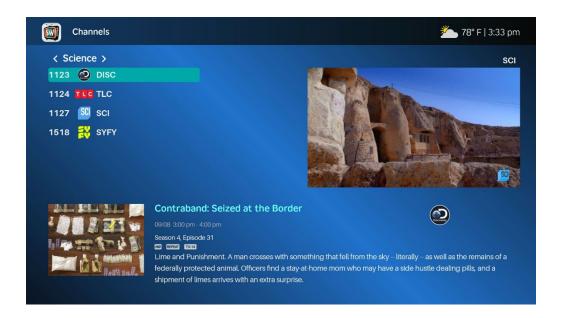


How to See Your Favorite Lists

Select **All Channels** from the Main Menu to display the left screen view below. After you create favorite channel lists, for example "Science", you can switch to display your favorite "Science" channel list here. Switch the list by using the remote **left/right arrows**.

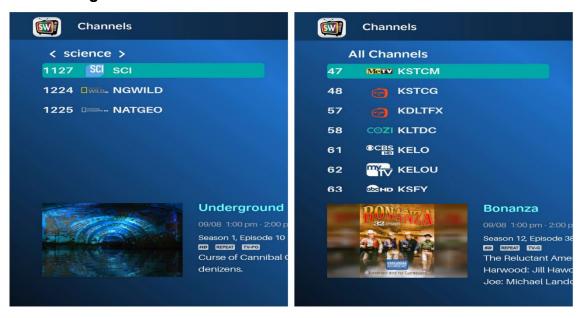


Changing Your Favorite Lists

While viewing your favorite list, press and hold the "OK" button to display the screen below. You can remove this channel from your favorites list.

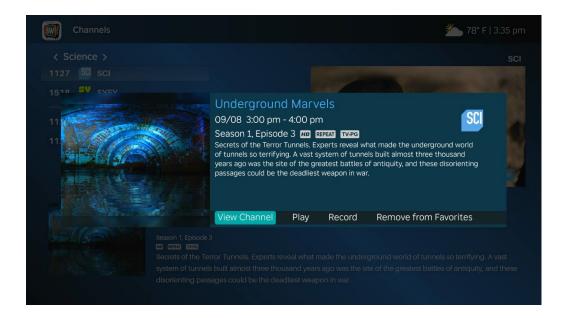

While viewing All Channels, press and hold the "OK" button to display the screen below. You can add this channel to your favorites list.

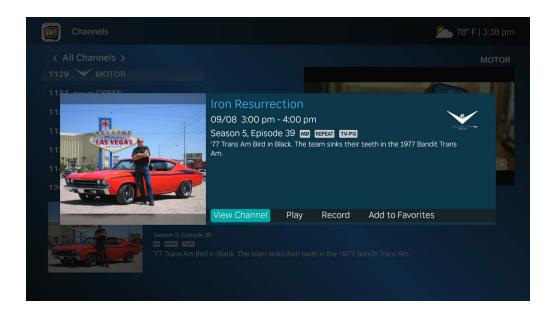

How to see the TV Guide with your Favorite Lists

Select **Guide** from the **Main Menu** to display the view below. While viewing the **TV Guide**, press and hold the **BACK** button for 3 seconds and then release it. You should now see the names of your favorite lists appear at the top of the screen. Use the **left/right arrows** on the remote to select the favorite list you would like to populate the guide with and then press **OK**.

